RED LINE RL60, TYPE 6503

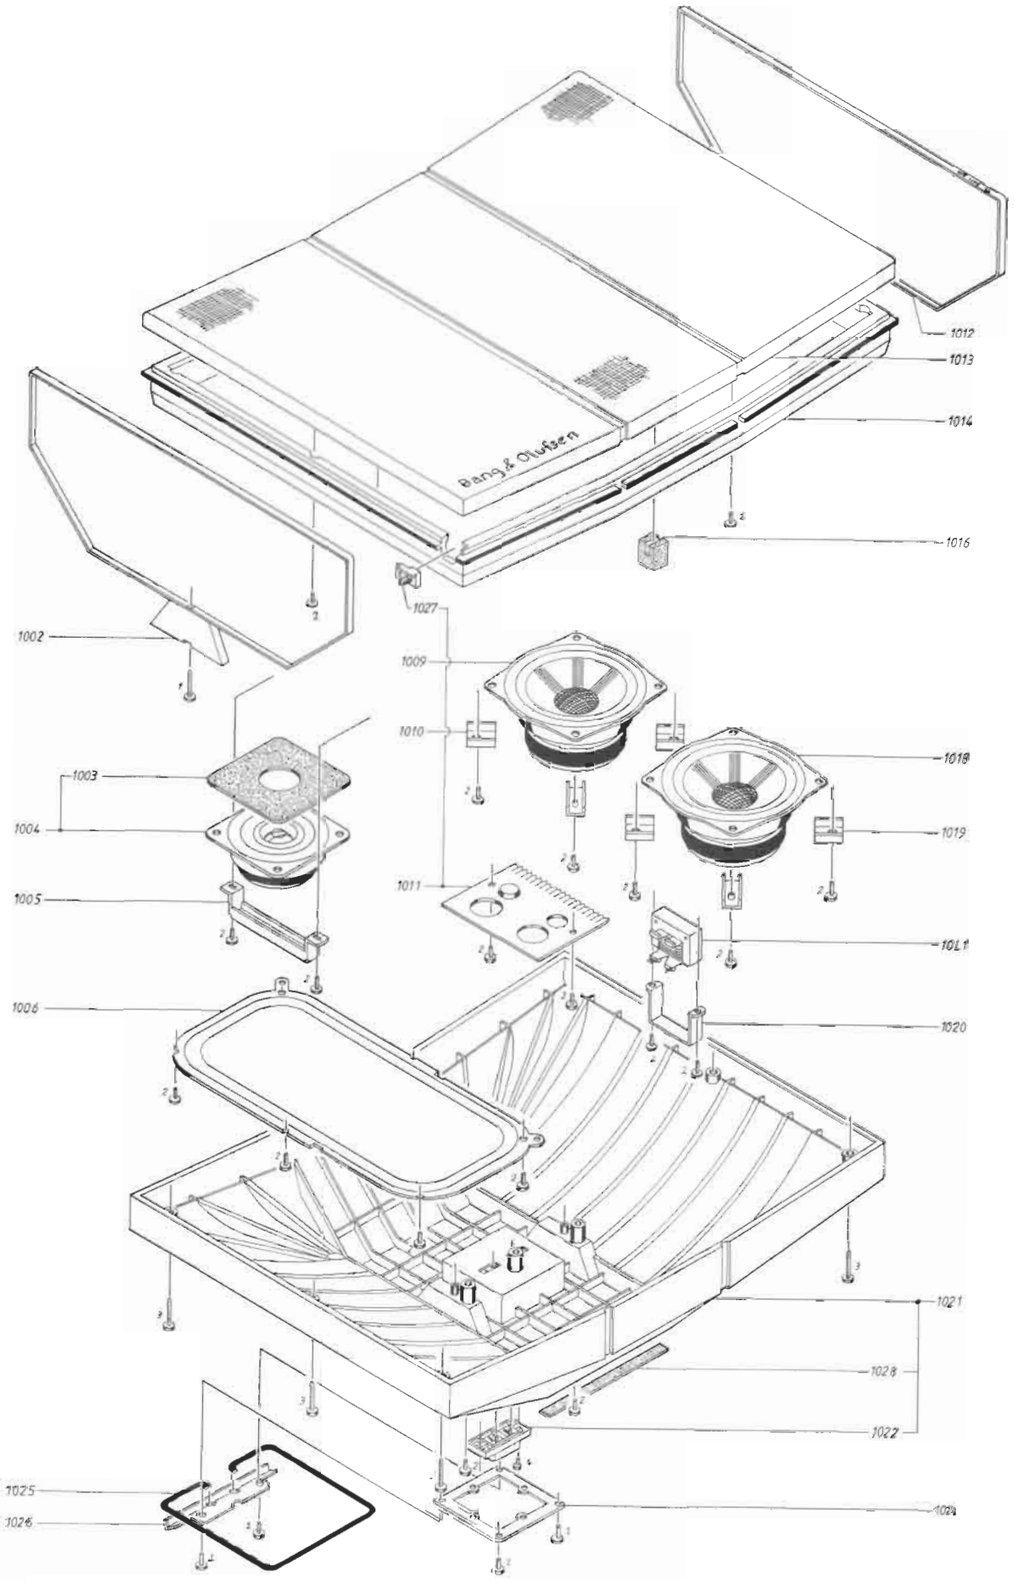

Mekanisk stykliste
List of Mechanical Parts

1002	3940138	Pyntebånd	Ribbon
1003	3340045	Pakning	Gasket
1004	8480176	Diskant højttaler	Tweeter
1005	3031125	Bøjle	Clamp
1006	8480180	ABR enhed	ABR unit
1009	8480177	Bas højttaler	Woofer
1010	3031124	Beslag	Fitting
1011	8039016	Delefilter	Crossover network
1012	3940137	Pyntebånd m. tryk	Ribbon with print
1013	3440085	Baffel m. stof	Baffle with cloth
1014	3320094	Ramme f. kabinet	Frame for cabinet
	3340055	Pakning til ramme	Gasket for frame
1016	3907045	Gummiklods	Rubber block
1018	8480177	Bas højttaler	Woofer
1019	3031124	Beslag	Fitting
1020	2510147	Bøjle	Clamp
1021	3414857	Kabinet	Cabinet
*1022	7210505	Dobbelt stikterminal	Double connection terminal
1024	3031116	Beslag ophæng	Fitting for wall mounting
1025	2514050	Støttebøjle	Support bow
1026	2548217	Beslag f. støttebøjle	Fitting for support bow
1027	7210507	DIN stik	DIN socket
1028	3912049	Filtstykke	Felt piece
1OL1	6850014	Spole 6,8 mH	Coil 6.8 mH

Skrueoversigt
Survey of screws

1	2015112	Skrue 3,5x50	Screw 3,5x50
2	2015108	Skrue 3,5x16	Screw 3.5x16
3	2015111	Skrue 3,5x40	Screw 3,5x40
4	2013118	Skrue 3x8	Screw 3x8

Ikke viste dele
Parts not shown

3031109	Standard beslag	Standard mounting bracket
2044015	Stilleskrue	Adjustment screw
3506108	Betjeningsanvisning	Owner's manual
3922018	Rock-wool klods, lille	Rock-wool block, small
3922019	Rock-wool klods, stor	Rock-wool block, large
6270167	Ledning 4 m	Cable 4 m

* I de første højttalere blev der brugt 2 enkeltstik sort stik nr. 7210483, rødt stik nr. 7210484

* The first loudspeakers were fitted with 2 separate sockets, black socket no. 7210483, red socket no. 7210484

Diagram

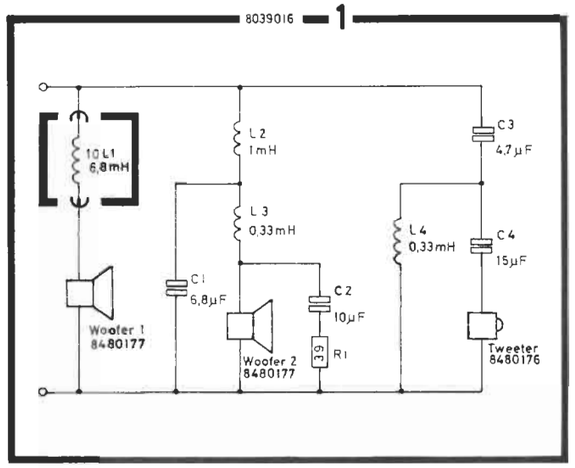

Elektrisk stykliste
List of Electrical Parts

R1	5020692	39 Ω 5% 3W			
C1	4200336	6.8 µF 20% 23V	C3	4200387	4.7 µF 20% 23V
C2	4200337	10 µF 20% 23V	C4	4200273	15 µF 20% 23V
L2	6850153	Coil 1mH	L4	6850144	Coil 0.33mH
L3	6850019	Coil 0.33mH			
10L1	6850014	Coil 6.8mH			

Pakke procedure
Packing procedure

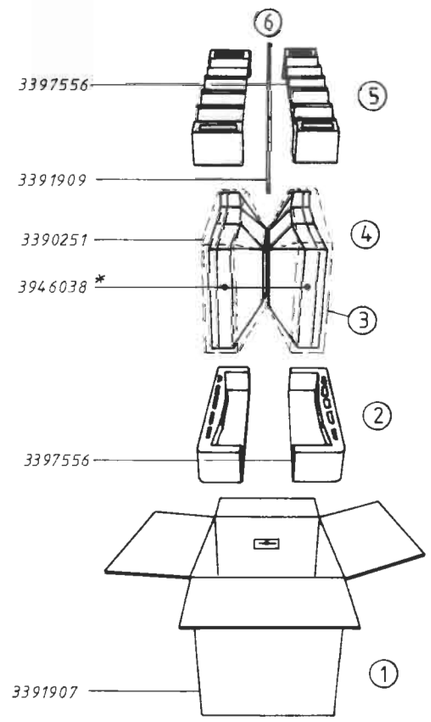

* Folie 3946038 leveres i metermal.

* Foil 3946038 is sold by the metre.

Technical specifications

RMS power handling capacity	60 watts
Music power handling capacity	90 watts
Impedance	8 ohms
Frequency range +4 -8 dB	45-20,000 Hz
Power at 96 dB SPL	2 watts
Sensitivity 1 W	93 dB
Distortion 250-1000 Hz	<1%
Distortion >1000 Hz	<0.5%
Acoustic principle	ABR, Auxiliary Bass Radiator
ABR unit	15 x 33 cm
Woofer	2 units 5" - 13 cm
Tweeter	1" - 25 mm
Crossover frequency	2500 Hz
Net. volume	19 litres
Dimensions WxHxD	54 x 40.5 x 18 cm
Weight	9 kg

Subject to change without notice

Oversigt over tilbehør til RL60
Survey of accessories for RL60

8960246	Spiralledning	Red Line Cord
3124101	Opspændingsplade til lette skillevægge	Wall plate for light partition walls
8960220	Loftssøjle	Ceiling Bracket
8960187	Understel	Stand
8960206	Indstillelig vægbeslag	Wall Bracket
3390263	Pose m. dele til indstillelig vægbeslag	Bag w. parts for Wall Bracket

Loftssøjle, 8960220
Ceiling Bracket, 8960220

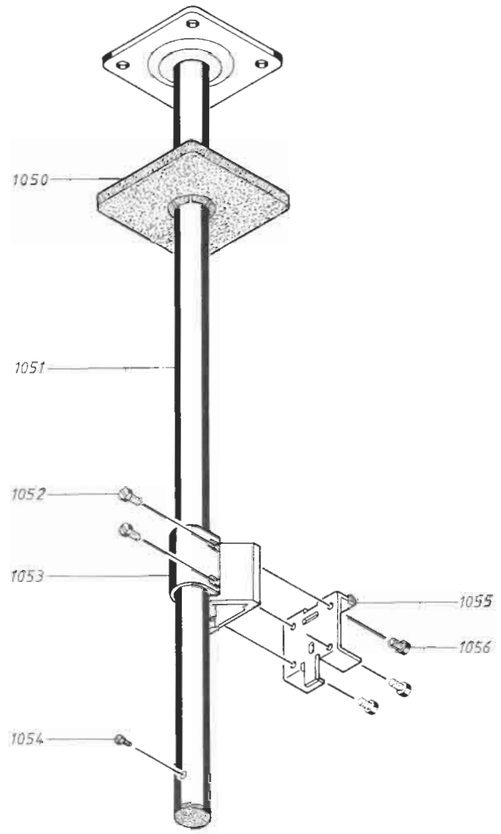

1050	3162224	Dæksel	Cover plate
1051	3103195	Rør	Tube
1052	2044035	Skrue AM5x10	Screw AM5x10
1053	2644016	Spændestykke	Triangle with ribbon
1054	2042201	Skrue AM4x4	Screw AM4x4
1055	3031109	Standard beslag	Standard mounting bracket
1056	2044035	Skrue AM5x10	Screw AM5x10
	3390262	Pose m. dele	Bag w. parts
	3391922	Emballage	Packing

Understel, 8960187
Stand, 8960187

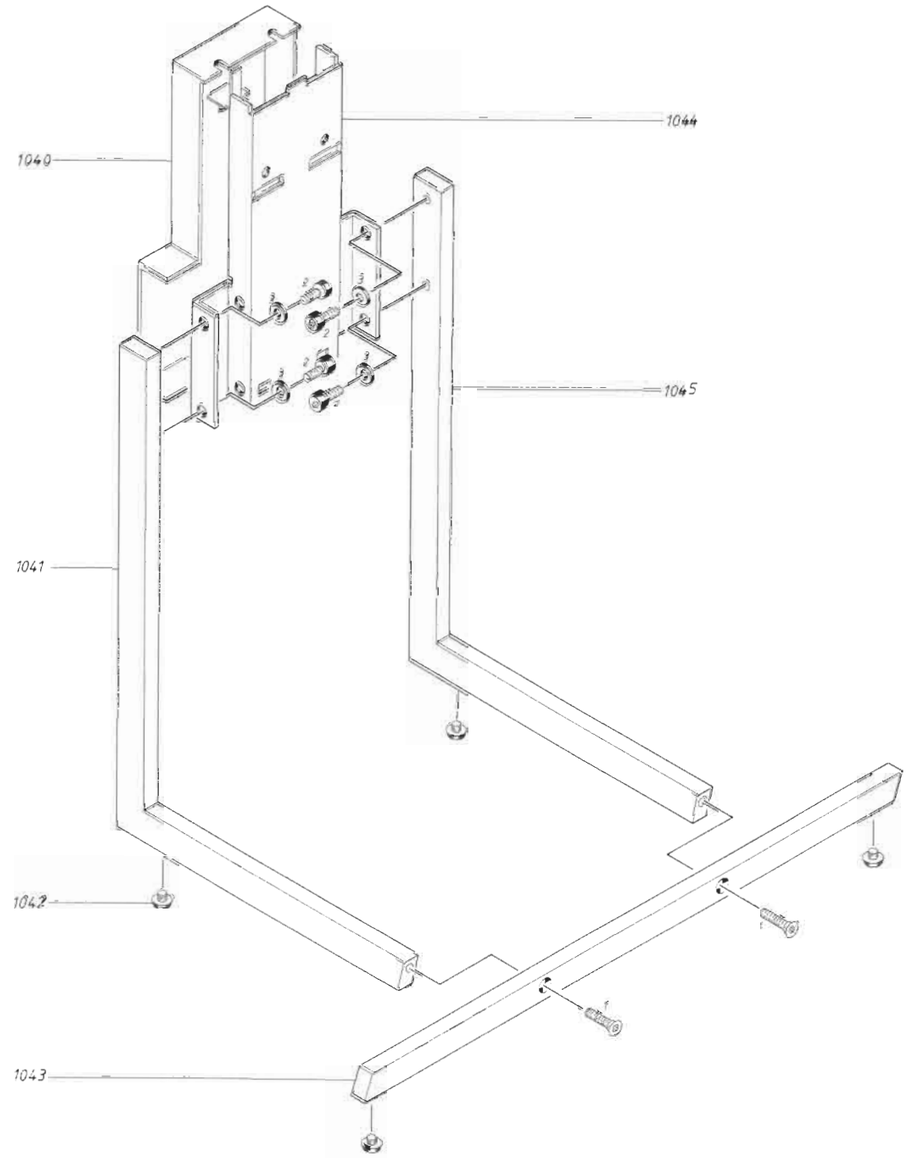

1040	3162218	Dækplade	Cover plate
1041	3930062	Endestykke, venstre	End piece, left
1042	3035026	Gummifod	Rubber foot
1043	2568854	Skinne	Bar
1044	3031119	Beslag	Mounting bracket
1045	3930061	Endestykke, højre	End piece, right
	2316007	Stilleskrue	Adjustment screw
	3031109	Standard beslag	Standard mounting bracket
	3390258	Pose m. dele	Bag w. parts
	2044029	Skrue M5x6	Screw M5x6
	3040016	Sekskantnøgle 4 mm	Hexagon spanner 4 mm
	3040020	Sekskantnøgle 2,5 mm	Hexagon spanner 2.5 mm
	3397541	Skumemballage	Foam packing
	3391914	Omslag	Wrapper
	3946013	Plastfolie 1 m	Plastic foil 1 m

Skrueoversigt
Survey of screws

1	2042049	Skrue M4x20	Screw M4x20
2	2044012	Skrue M5x10	Screw M5x10
3	2622028	Skive	Washer

Adskillelse

Disassembly

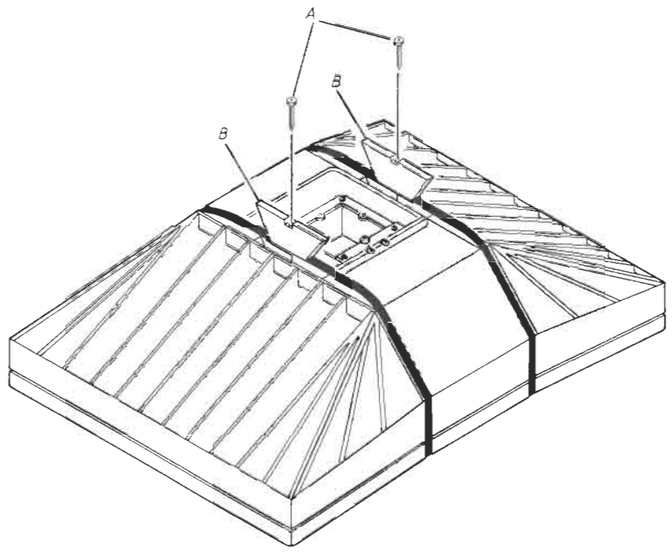

Aftag de to skruer A.

De to spændestykker B med pyntebånd kan nu aftages.

NB! Vær opmærksom på at det kun er det øverste bånd, der er forsynet med tekst, samt at teksten vendes korrekt ved samling af højttaleren igen

Remove the two screws A.

The two triangles B with ribbon can now be removed.

NB! Note that only the upper ribbon is supplied with text, and make sure the text is turned correctly when re-assembling.

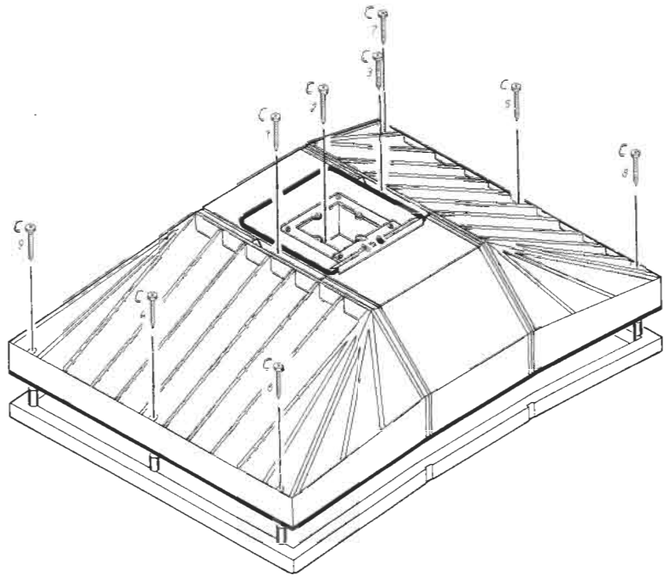

Aftag de ni skruer C.

Bagparten kan nu tages af.

Ved samling af højttaleren igen skal skruerne spændes i rækkefølgen 1-9, for at sikre at kabinettet er helt tæt.

Anbefalet tilspændingsmoment er 15 kp/cm.

Remove the nine screws C.

The rear part can now be removed.

When re-assembling the loudspeaker the screws must be tightened in the order 1-9, in order to ensure that the cabinet is completely tight.

Recommended torque is 15 kp/cm.

Servicetips

Reparationsmetode for skruehuller til kabinetsammenspænding.

Hvis skruerne til kabinetsammenspænding (mærket 3 på tegning) skrues over, kan følgende reparationsmetode anvendes:

Mellemramme (pos. 1014) afmonteres.

De 6 huller i baflen bores op til 6,2 mm.

Indslagsbøsning 2389054 hamres i de opborede huller, indtil de flugter med overfladen.

Højttaleren samles igen, og der anvendes M4 skruer til sammenspænding:

RL45, type 6504, AM4x16 mm, bestillingsnr. 2043035
RL60, type 6503, AM4x25 mm, bestillingsnr. 2043031

Service Tips

Repair method for screw holes for cabinet assembly.

In case the screws for cabinet assembly (marked 3 on the drawing) are stripped, the following repair method may be used.:

Connecting frame (pos. 1014) is dismantled.

The 6 holes in the baffle are rebored to 6.2 mm.

Drive-fit bushing 2389054 is hammered into the rebored holes, until they flush.

Re-assemble loudspeaker and use M4 screws for assembly:

RL45, type 6504, AM4x16 mm, part no. 2043035
RL60, type 6503, AM4x25 mm, part no. 2043031

RED LINE RL45, TYPE 6504

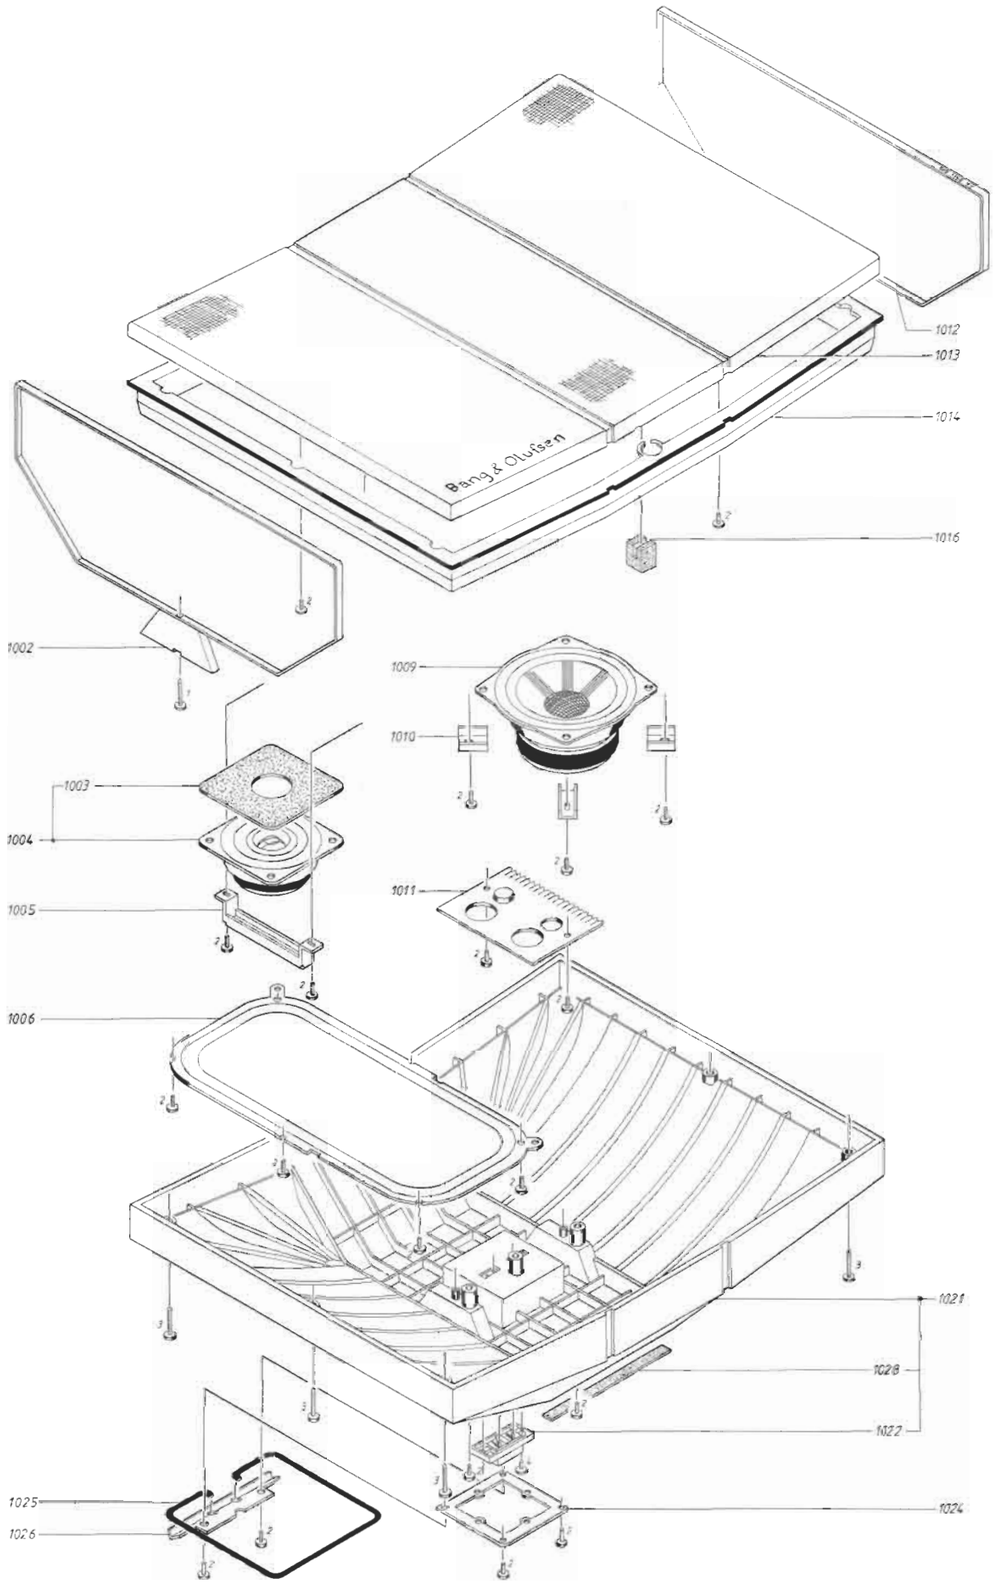

Mekanisk stykliste
List of Mechanical Parts

1002	3940146	Pyntebånd	Ribbon
1003	3340045	Pakning	Gasket
1004	8480176	Diskant højttaler	Tweeter
1005	3031125	Bøjle	Clamp
1006	8480180	ABR enhed	ABR unit
1009	8480178	Bas højttaler	Woofer
1010	3031124	Beslag	Fitting
1011	8039070	Delefilter	Crossover network
1012	3940145	Pyntebånd m. tryk	Ribbon with print
1013	3440086	Baffel m. stof	Baffle with cloth
1014	3320095	Ramme f. kabinet	Frame for cabinet
	3340055	Pakning til ramme	Gasket for frame
1016	3907045	Gummiklods	Rubber block
1021	3414857	Kabinet	Cabinet
*1022	7210509	Dobbelt stikterminal	Double connection terminal
1024	3031110	Beslag ophæng	Fitting for wall mounting
1025	2514050	Støttebøjle	Support bow
1026	2548217	Beslag f. støttebøjle	Fitting for support bow
1028	3912049	Filtstykke	Felt piece

Skrueoversigt
Survey of screws

1	2015112	Skrue 3,5x50	Screw 3.5x50
2	2015108	Skrue 3,5x16	Screw 3.5x16
3	2015111	Skrue 3,5x40	Screw 3.5x40
4	2013118	Skrue 3x8	Screw 3x8

Ikke viste dele
Parts not shown

3031109	Standard beslag	Standard mounting bracket
2044015	Stilleskrue	Adjustment screw
3506108	Betjeningsanvisning	Owner's manual
3922018	Rock-wool klods, lille	Rock-wool block, small
3922019	Rock-wool klods, stor	Rock-wool block, large
6270167	Ledning 4 m	Cable 4 m

* I de første højttalere blev der brugt 2 enkeltstik sort stik nr. 7210483, rødt stik nr. 7210484

* The first loudspeakers were fitted with 2 separate sockets, black socket no. 7210483, red socket no. 7210484

Diagram

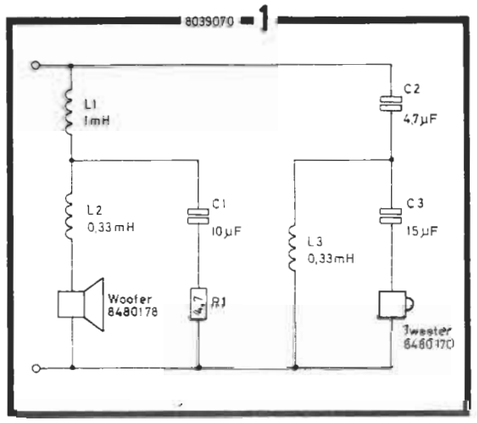

Elektrisk stykliste
List of Electrical Parts

R1	5104012	4.7 Ω 10% 3W			
C1	4200237	10 µF 20% 23V	C3	4200273	15 µF 20% 23V
C2	4200387	4.7 µF 20% 23V			
L1	6850153	Coil 1mH	L3	6850144	Coil 0.33mH
L2	6850019	Coil 0.33mH			

Pakke procedure
Packing procedure

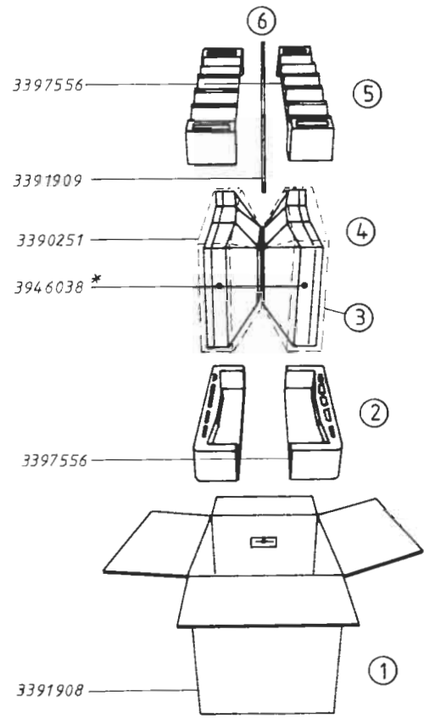

* Folie 3946038 leveres i metermål.

* Foil 3946038 is sold by the metre.

Technical specifications

RMS power handling capacity	45 watts
Music power handling capacity	60 watts
Impedance	8 ohms
Frequency range +4 -8 dB	48-20,000 Hz
Power at 96 dB SPL	2.5 watts
Sensitivity 1 W	92 dB
Distortion 250-1000 Hz	<1%
Distortion >1000 Hz	<1%
Acoustic principle	ABR, Auxiliary Bass Radiator
ABR unit	15 x 33 cm
Woofer	6½" - 16 cm
Tweeter	1" - 25 mm
Crossover frequency	2500 Hz
Net volume	16 litres
Dimensions WxHxD	54 x 40.5 x 16 cm
Weight	7.5 kg

Subject to change without notice

Oversigt over tilbehør til RL45
Survey of accessories for RL45

3124101	Opspændingsplade til lette skillevægge	Wall plate for light partition walls
8960220	Loftssøjle	Ceiling Bracket
8960187	Understel	Stand
8960206	Indstillelig vægbeslag	Wall Bracket
3390263	Pose m. dele til indstillelig vægbeslag	Bag w. part for Wall Bracket

Loftssøjle, 8960220
se side 1-5

Ceiling Bracket, 8960220
see page 1-5

Understel, 8960187
se side 1-6

Stand, 8960187
see page 1-6

Adskillelse
se side 1-7

Disassembly
see page 1-7

Servicetips
se side 1-8

Service Tips
see page 1-8

RL45.2, TYPE 6514

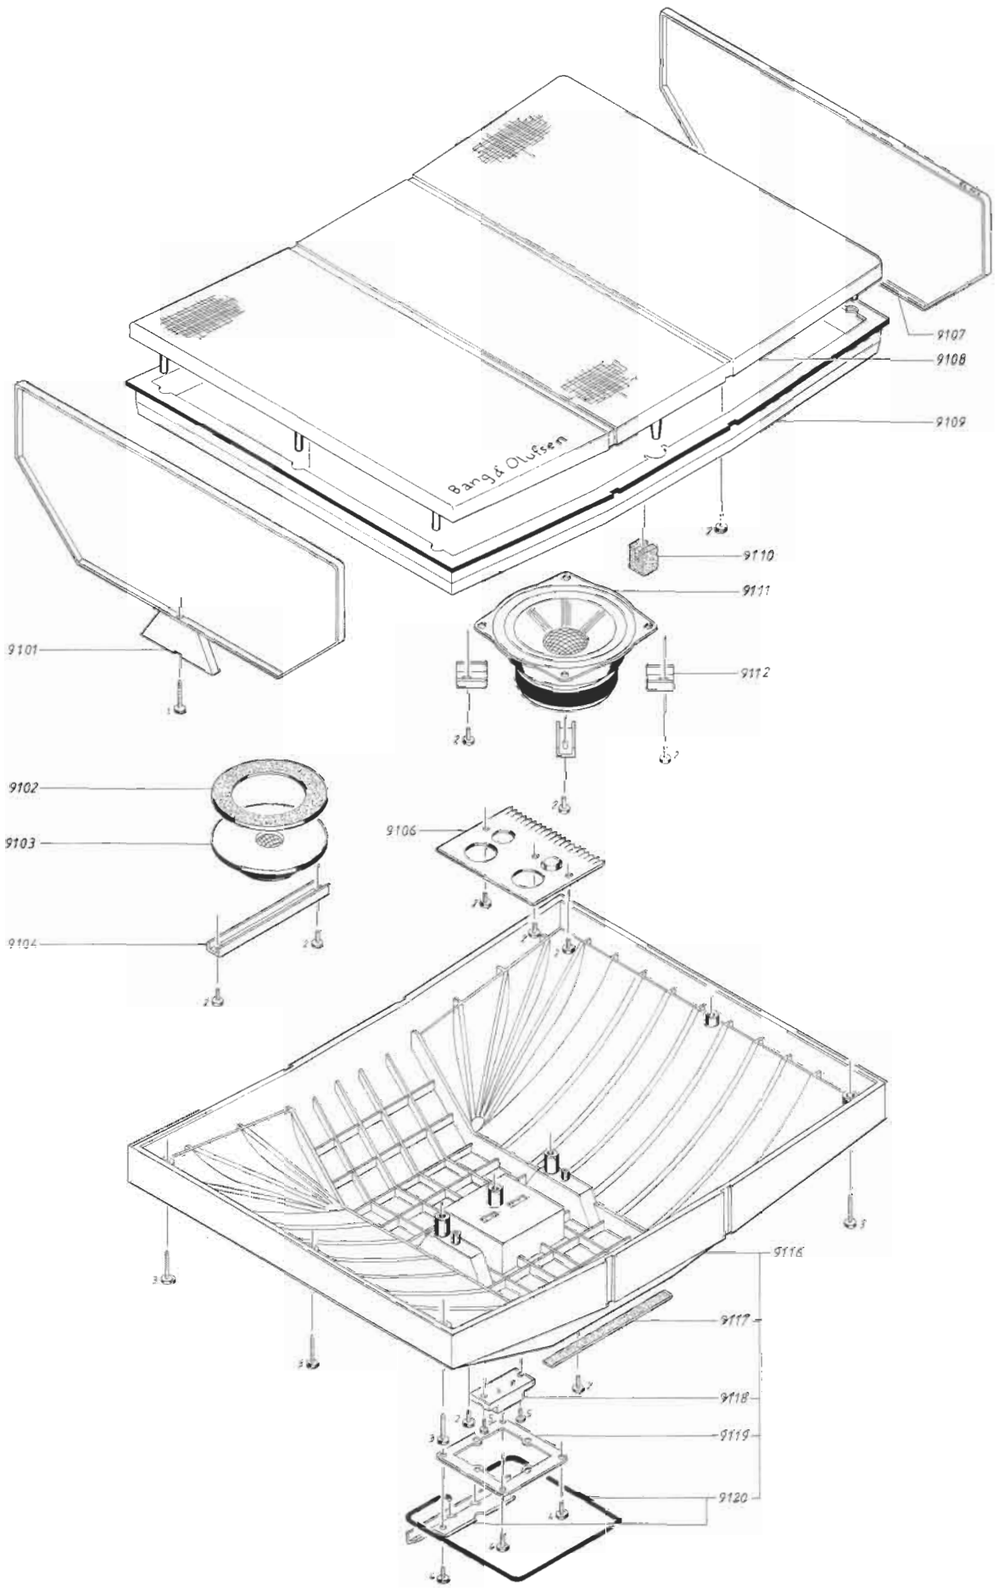

3538641 INDKLÆBES I SERVICEANVISNING BEOVOX 4
TO PASTE INTO SERVICE MANUAL BEOVOX 4

Mekanisk stykliste / List of Mechanical Parts

9101	3940146	Pyntebånd	Ribbon
9102	3340067	Pakning	Gasket
9103	8480199	Diskant højttaler	Tweeter
9104	3031143	Beslag	Fitting
9106	8039072	Delefilter	Crossover network
9107	3940186	Pyntebånd m. tryk	Ribbon with print
9108	3440099	Baffel m. stof	Baffle with cloth
9109	3320095	Ramme f. kabinet	Frame for cabinet
	3340055	Pakning til ramme	Gasket for frame
9110	3907045	Gummiklods	Rubber block
9111	8480178	Bas højttaler	Woofer
	3340048	Pakning f. bas højttaler	Gasket for woofer
9112	3031124	Beslag	Fitting
9116	3414857	Kabinet	Cabinet
9117	3912049	Filtstykke	Felt piece
9118	7210509	Dobbelt stikterminal	Double connection terminal
9119	3031110	Beslag ophæng	Fitting for wall mounting
9120	2514050	Støttebøjle m. beslag	Support bow with fitting

Skrueoversigt / Survey of screws

1	2019012	Skrue 4x50	Screw 4x50
2	2019011	Skrue 4x16	Screw 4x16
3	2019013	Skrue 4x40	Screw 4x40
4	2019009	Skrue 4x12	Screw 4x12
5	2013123	Skrue 3x10	Screw 3x10

Ikke viste dele / Parts not shown

3031109	Standard beslag	Standard mounting bracket
2044015	Stilleskrue	Adjustment screw
3922018	Rock-wool klods, lille	Rock-wool block, small
3922019	Rock-wool klods, stor	Rock-wool block, large
6270167	Ledning 4 m	Cable 4 m
3506112	Betjeningsanvisning	Owner's manual
3391908	Yderæske	Outer carton
3391909	Indlæg	Insert
3397556	Skumemballage sæt	Foam packing set
3390277	Folie pose	Foil bag

Diagram

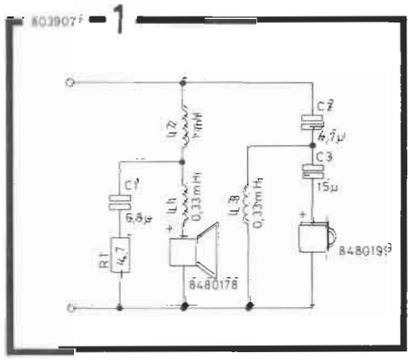

Elektrisk stykliste / List of Electrical Parts

R1	5104012	4.7 Ω 10% 3W			
C1	4200457	6.8 µF 20% 35V	C3	4200273	15 µF 20% 23V
C2	4200387	4.7 µF 20% 23V			

For udskiftning af spoler L1 - L3 bestilles komplet delefilter.

When replacing coils L1 - L3, order complete crossover network.

Technical specifications
RL 45.2

RMS power handling capacity	45 watts
Music power handling capacity	60 watts
Impedance	8 ohms
Frequency range +4 -8 dB	48-20,000 Hz
Power at 96 dB SPL	2.5 watts
Sensitivity 1 W	92 dB
Acoustic principle	Bass Reflex
Woofer	6 1/2" - 16 cm
Tweeter	3/4" - 1.9 cm
Crossover frequency	2500 Hz
Net. volume	16 litres
Dimensions W x H x D	54 x 40.5 x 16 cm
Weight	6.8 kg

Subject to change without notice

Technical specifications
RL 60.2

RMS power handling capacity	60 watts
Music power handling capacity	90 watts
Impedance	8 ohms
Frequency range +4 -8 dB	42-20,000 Hz
Power at 96 dB SPL	2 watts
Sensitivity 1 W	93 dB
Acoustic principle	Bass Reflex
Woofer	2 units 5" - 13 cm
Tweeter	1" - 2.5 cm
Crossover frequency	3500 Hz
Net. volume	19 litres
Dimensions W x H x D	54 x 40.5 x 18 cm
Weight	8.3 kg

Subject to change without notice

RL60.2, TYPE 6513

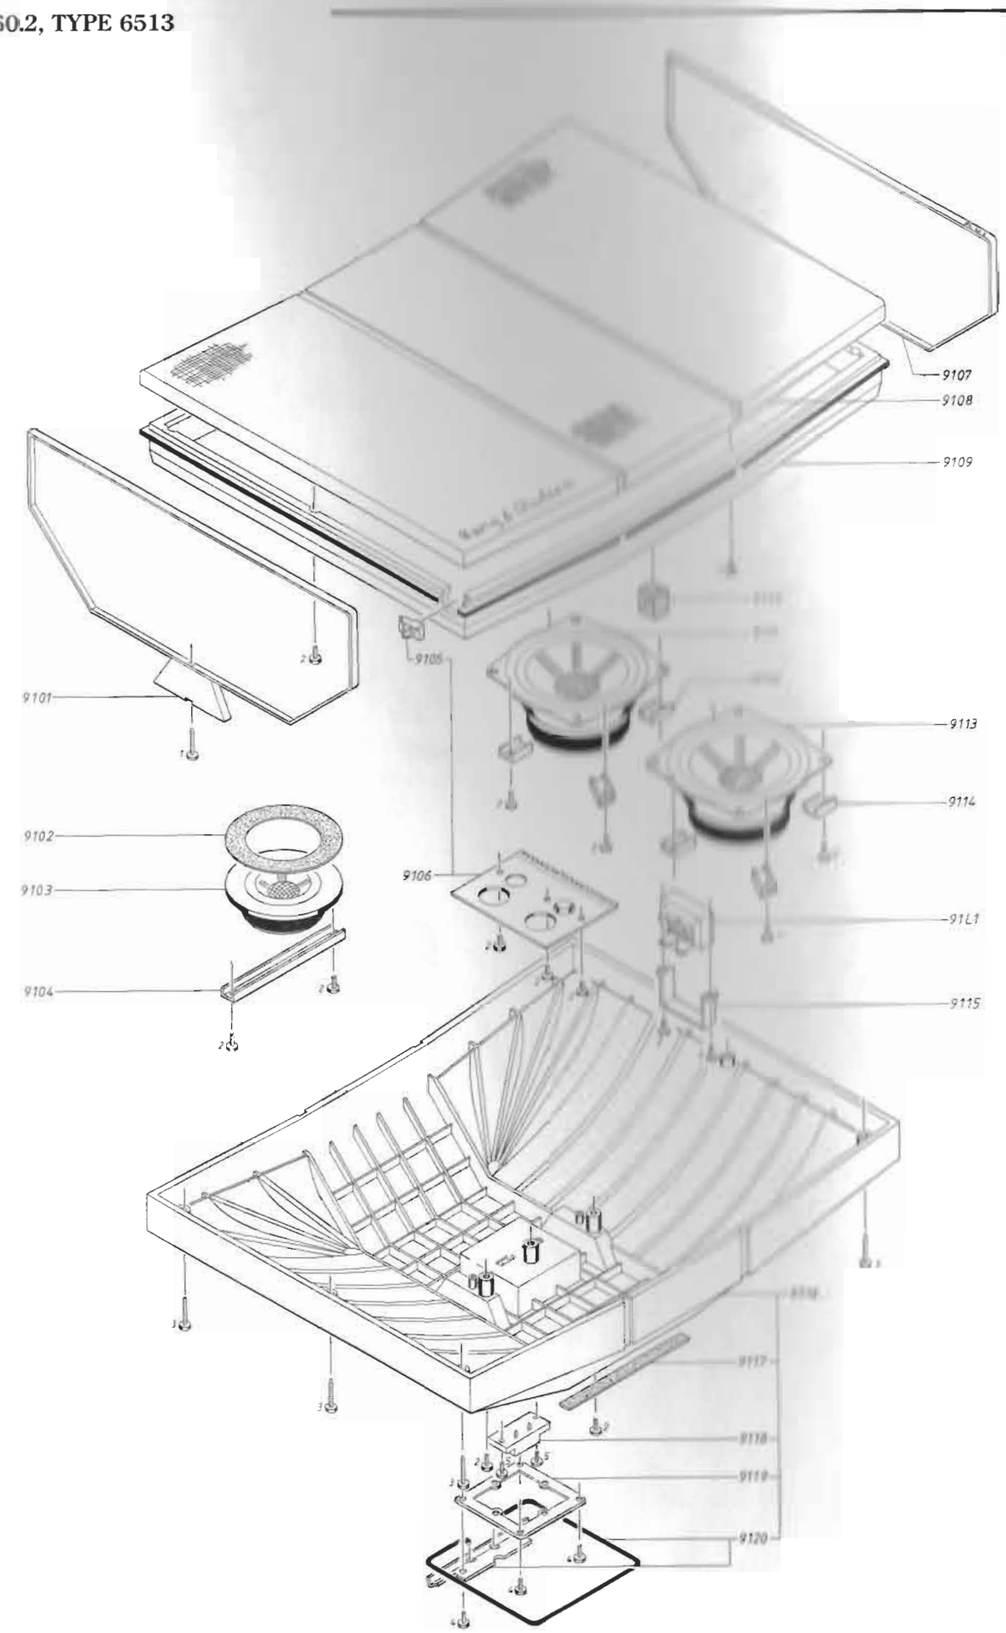

ekanisk stykliste
st of Mechanical Parts

Skrueoversigt
Survey of screws

Ikke viste dele
Parts not shown

Diagram

Elektrisk stykliste
List of Electrical Parts

Mekanisk stykliste
List of Mechanical Parts

9101	3940146	Pyntebånd	Ribbon
9102	3340067	Pakning	Gasket
9103	8480199	Diskant højttaler	Tweeter
9104	3031143	Beslag	Fitting
9106	8039072	Delefilter	Crossover network
9107	3940186	Pyntebånd m. tryk	Ribbon with print
9108	3440099	Baffel m. stof	Baffle with cloth
9109	3320095	Ramme f. kabinet	Frame for cabinet
	3340055	Pakning til ramme	Gasket for frame
9110	3907045	Gummiklods	Rubber block
9111	8480178	Bas højttaler	Woofer
	3340048	Pakning f. bas højttaler	Gasket for woofer
9112	3031124	Beslag	Fitting
9116	3414857	Kabinet	Cabinet
9117	3912049	Filtstykke	Felt piece
9118	7210509	Dobbelt stikterminal	Double connection terminal
9119	3031110	Beslag ophæng	Fitting for wall mounting
9120	2514050	Støttebøjle m. beslag	Support bow with fitting

Skrueoversigt
Survey of screws

1	2019012	Skrue 4x50	Screw 4x50
2	2019011	Skrue 4x16	Screw 4x16
3	2019013	Skrue 4x40	Screw 4x40
4	2019009	Skrue 4x12	Screw 4x12
5	2013123	Skrue 3x10	Screw 3x10

Ikke viste dele
Parts not shown

	3031109	Standard beslag	Standard mounting bracket
	2044015	Stilleskrue	Adjustment screw
	3922018	Rock-wool klods, lille	Rock-wool block, small
	3922019	Rock-wool klods, stor	Rock-wool block, large
	6270167	Ledning 4 m	Cable 4 m
	3506112	Betjeningsanvisning	Owner's manual
	3391908	Yderæske	Outer carton
	3391909	Indlæg	Insert
	3397556	Skumemballage sæt	Foam packing set
	3390277	Folie pose	Foil bag

Diagram

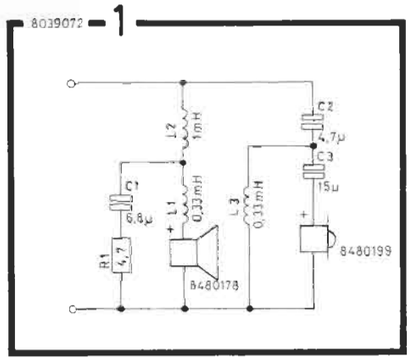

Elektrisk stykliste
List of Electrical Parts

R1	5104012	4.7 Ω 10% 3W			
C1	4200457	6.8 µF 20% 35V	C3	4200273	15 µF 20% 23V
C2	4200387	4.7 µF 20% 23V			

For udskiftning af spoler L1 - L3 bestilles komplet delefilter.

When replacing coils L1 - L3, order complete crossover network.

Mekanisk stykliste
List of Mechanical Parts

9101	3940138	Pyntebånd	Ribbon
9102	3340066	Pakning	Gasket
9103	8480200	Diskant højttaler	Tweeter
9104	3031143	Beslag	Fitting
9105	7210507	DIN stik	DIN socket
9106	8039073	Delefilter	Crossover network
9107	3940187	Pyntebånd m. tryk	Ribbon with print
9108	3440098	Baffel m. stof	Baffle with cloth
9109	3320094	Ramme f. kabinet	Frame for cabinet
	3340055	Pakning til ramme	Gasket for frame
9110	3907045	Gummiklods	Rubber block
9111	8480177	Bas højttaler	Woofer
9112	3031124	Beslag	Fitting
9113	8480177	Bas højttaler	Woofer
9114	3031124	Beslag	Fitting
9115	2510151	Bøjle	Clamp
9116	3414857	Kabinet	Cabinet
9117	3912049	Filtstykke	Felt piece
9118	7210509	Dobbelt stikterminal	Double connection terminal
9119	3031110	Beslag ophæng	Fitting for wall mounting
9120	2514050	Støttebøjle m. beslag	Support bow with fitting
91L1	6850186	Spole 6.8 mH	Coil 6.8 mH

Skrueoversigt
Survey of screws

1	2019012	Skrue 4x50	Screw 4x50
2	2019011	Skrue 4x16	Screw 4x16
3	2019013	Skrue 4x40	Screw 4x40
4	2019009	Skrue 4x12	Screw 4x12
5	2013123	Skrue 3x10	Screw 3x10

Ikke viste dele
Parts not shown

	3031109	Standard beslag	Standard mounting bracket
	2044015	Stilleskrue	Adjustment screw
	3922018	Rock-wool klods, lille	Rock-wool block, small
	3922019	Rock-wool klods, stor	Rock-wool block, large
	6270167	Ledning 4 m	Cable 4 m
	3506113	Betjeningsanvisning	Owner's manual
	3391907	Yderæske	Outer carton
	3391909	Indlæg	Insert
	3397556	Skumemballage sæt	Foam packing set
	3390277	Folie pose	Foil bag

Diagram

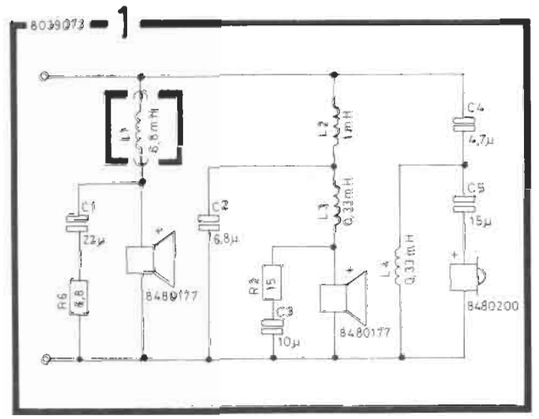

Elektrisk stykliste
List of Electrical Parts

R2	5100200	15 Ω 10% 3W	R6	5100242	6.8 Ω 5% 3W
C1	4200468	22 µF 20% 23V	C4	4200387	4.7 µF 20% 23V
C2	4200336	6.8 µF 20% 23V	C5	4200273	15 µF 20% 23V
C3	4200337	10 µF 20% 23V			

For udskiftning af spoler L2 - L4 bestilles komplet delefilter.

When replacing coils L2 - L4, order complete crossover network.

RL 140, TYPE 6501

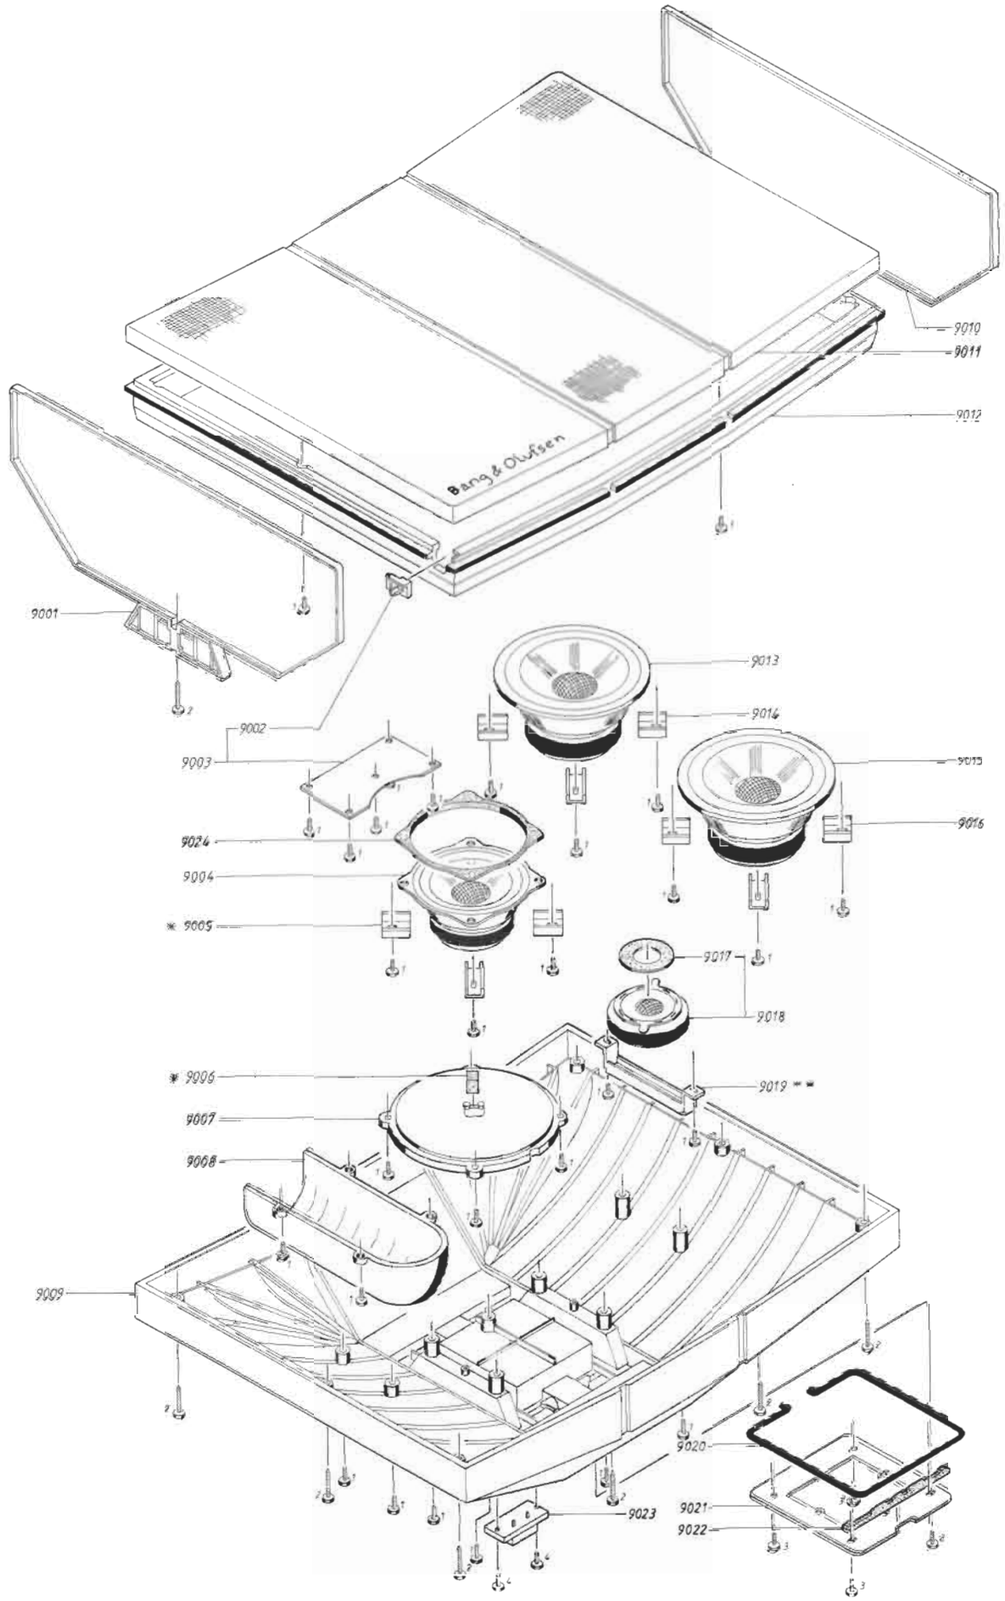

Mekanisk stykliste
List of Mechanical Parts

9001	3940158	Pyntebånd uden tryk	Ribbon without print
9002	7210506	DIN-stik	DIN socket
9003	8006015	Delefilter	Crossover network
9004	8480190	Mellemtone-højttaler	Mid-range loudspeaker
9005*	3031124	Beslag f. mellemtone-højttaler	Fitting for mid-range loudspeaker
9006*	3907045	Gummiklods	Rubber block
9007	3160030	Dæksel f. mellemtone-højttaler	Cover f. mid-range loudspeaker
9008	3458410	Rør f. bas port	Tube f. port
9009	3414557	Kabinet	Cabinet
9010	3940159	Pyntebånd med tryk	Ribbon with print
9011	3440089	Baffel m. stof og rør f. bas port	Baffle with cloth and tube f. port
9012	3320101	Ramme m. pakning f. kabinet	Frame with gasket for cabinet
	3340062	Pakning f. ramme	Gasket for frame
9013	8480186	Bas-højttaler	Woofer
9014	3031124	Beslag f. bas-højttaler	Fitting for woofer
9015	8480186	Bas-højttaler	Woofer
9016	3031124	Beslag f. bas-højttaler	Fitting for woofer
9017	3340064	Pakning f. diskant-højttaler	Gasket for tweeter
9018	8480191	Diskant højttaler	Tweeter
9019**	3031143	Beslag f. diskant-højttaler	Fitting for tweeter
9020	2514052	Støttebøjle	Support bow
9021	3031115	Beslag ophæng	Fitting for wall mounting
9022	3907048	Dæmpegummi f. støttebøjle	Damping rubber f. support bow
9023	7210509	Dobbelt stikterminal	Double connection terminal
9024	3340063	Pakning f. mellemtone-højttaler	Gasket for mid-range loudspeaker

Skrueoversigt
Survey of screws

1	2019011	Skrue 4 x 16	Screw 4 x 16
2	2019012	Skrue 4 x 50	Screw 4 x 50
3	2015113	Skrue 3,5 x 16	Screw 3.5 x 16
4	2013123	Skrue 3 x 10	Screw 3 x 10

Ikke viste dele
Parts not shown

	2044015	Stilleskrue	Adjustment screw
	3031116	Standard beslag	Standard mounting bracket
	6270167	Ledning 4 m	Cable 4 m
	3397587	Skumemballage sæt	Foam packing set
	3391961	Yderæske	Outer carton
	3390274	Pose f. højttaler	Bag for loudspeaker
	3506111	Betjeningsanvisning	Owner's manual
	3922020	Rock-woll klods 150 x 450 mm	Rock-wool block 150 x 450 mm
	3922021	Rock-wool klods 75 x 450 mm	Rock-wool block 75 x 450 mm
	3922026	Rock-wool klods 120 x 150 mm	Rock-wool block 120 x 150 mm
	3922022	Rock-wool klods 75 x 200 mm	Rock-wool block 75 x 200 mm
	3922027	Rock-wool klods 49 x 500 mm	Rock-wool block 49 x 500 mm

** I højttalere med apparat nr. før 3397001 bruges gummiklods pos. nr. 9006 efter 3397001 bruges beslag pos.nr. 9005.*

** In loudspeakers with serial no. before 3397061 rubber block pos. no. 9006 is used, after no. 3397001 fitting pos. no. 9005 is used.*

*** I de første højttalere blev beslag nr. 3031125 brugt.*

*** In the first loudspeakers fitting no. 3031125 was used.*

Diagram

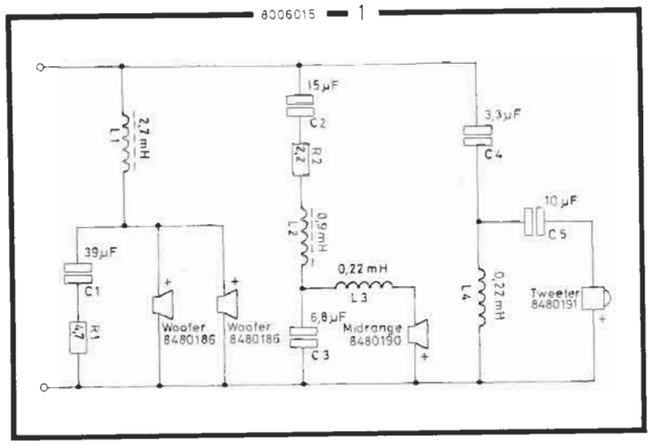

Elektrisk stykliste
List of Electrical Parts

R1	5100310 4.7 Ω 10% 9W	R2	5100296 2.2 Ω 10% 7W
C1	4200673 39 µF 20% 35V	C4	4200125 3.3 µF 20% 23V
C2	4200456 15 µF 20% 35V	C5	4200337 10 µF 20% 23V
C3	4200457 6.8 µF 20% 35V		

For udskiftning af spoler L1 - L4 bestilles komplet delefilter.

When replacing coils L1 - L4, order complete crossover network.

Technical specifications

RMS power handling capacity	140 watts
Music power handling capacity	200 watts
Impedance	8 ohms
Frequency range +4 -8 dB	40-20,000 Hz
Power at 96 dB SPL	2 watts
Sensitivity 1 W	93 dB
Distortion 250-1000 Hz	<0.7%
Distortion >1000 Hz	<0.5%
Acoustic principle	Bass Reflex
Woofer	2 units 6 1/2" - 16.5 cm
Midrange	5" - 13 cm
Tweeter	1" - 2.5 cm
Crossover frequency	800/3000 Hz
Net. volume	38 litres
Dimensions W x H x D	70 x 50 x 24 cm
Weight	15 kg

Subject to change without notice

Polaritet på diskanthøjttaler
Polarity on tweeter

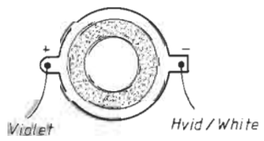

Adskillelse **Disassembly**

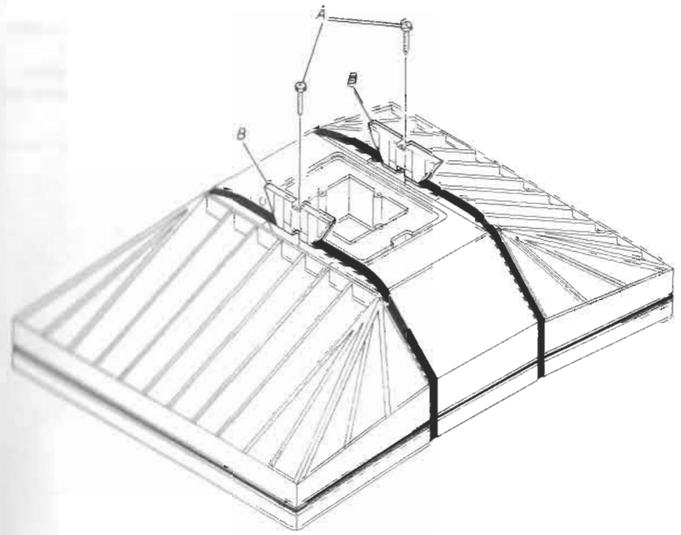

Aftag de to skruer A.

De to spændestykker B med pyntebånd kan nu aftages.

NB! Vær opmærksom på at det kun er det øverste bånd, der er forsynet med tekst, samt at teksten vendes korrekt ved samling af højttaleren igen.

Remove the two screws A.

The two triangles B with ribbon can now be removed.

NB! Note that only the upper ribbon is supplied with text, and make sure the text is turned correctly when re-assembling.

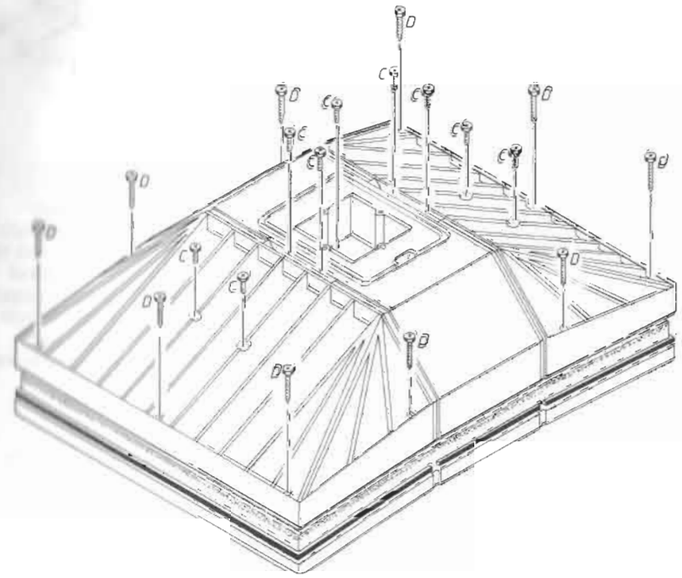

Aftag de ni skruer mærket C, og de ti skruer mærket D.

Bagparten kan nu tages af.

Ved samling af højttaleren igen anbefales et tilspændingsmoment på 16,5 kp/cm.

Remove the nine screws marked C and the ten screws marked D.

The rear part can now be removed.

When re-assembling the loudspeaker, a torque of 16.5 kp/cm is recommended.

Oversigt over tilbehør til RL140
Survey of accessories for RL140

8960276	Spiralledning	Red Line Cord
3124107	Opspændingsplade til lette skillevægge	Wall plate for light partition walls
8960230	Loftssøjle	Ceiling Bracket
8960197	Understel	Stand
8960216	Indstillelig vægbeslag	Wall Bracket
3390263	Pose m. dele til indstillelig vægbeslag	Bag w. parts for Wall Bracket

Loftssøjle, 8960230
Ceiling Bracket, 8960230

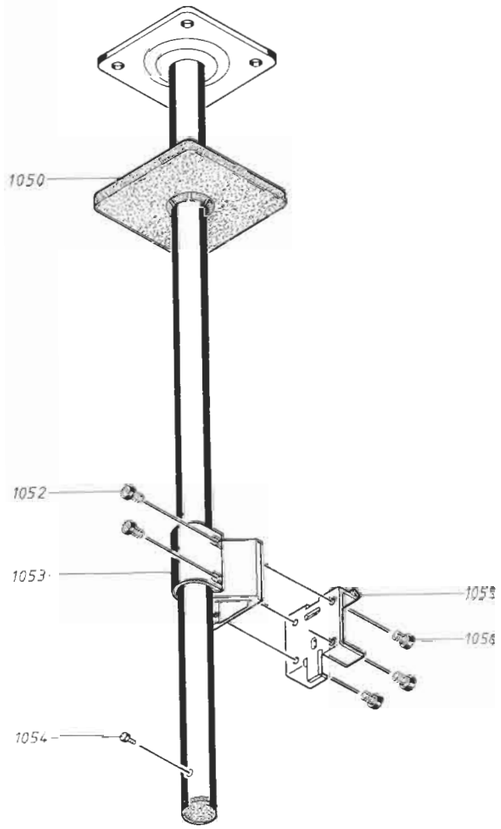

1050	3162224	Dæksel	Cover plate
1052	2044035	Skrue AM5x10	Screw AM5x10
1053	2644000	Spændestykke	Triangle with ribbon
1054	2042201	Skrue AM4x4	Screw AM4x4
1055	3031116	Standard beslag	Standard mounting bracket
1056	2044035	Skrue AM5x10	Screw AM5x10
	3390262	Pose m. dele	Bag w. parts
	3506105	Monterings instruktion	Mounting instruction

Understel, 8960197
Stand, 8960197

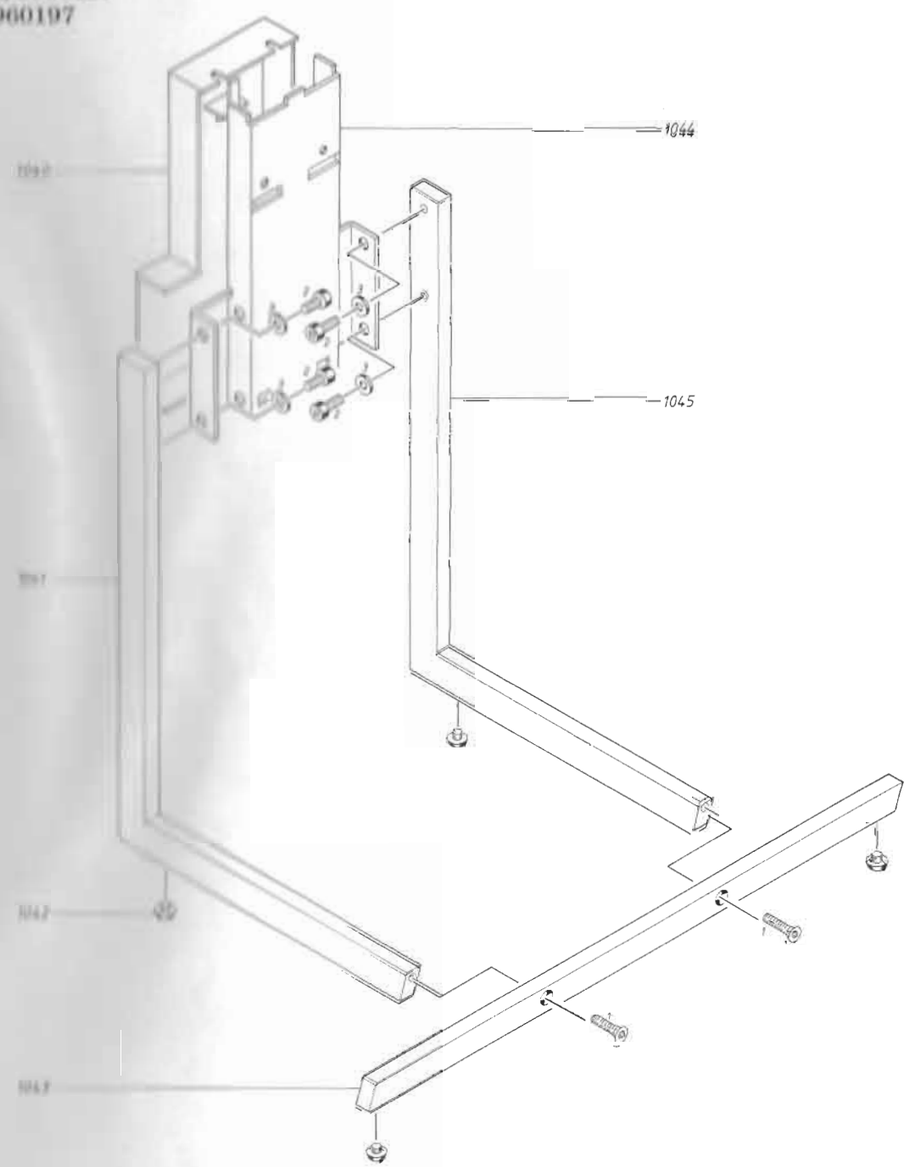

1040	3162227	Dæksplade	Cover plate
1041	3930066	Endestykke, venstre	End piece, left
1042	3035049	Gummifod	Rubber foot
1043	2568811	Skinne	Bar
1044	3031131	Beslag	Mounting bracket
1045	3930065	Endestykke, højre	End piece, right
	2816007	Stilleskrue	Adjustment screw
	3031116	Standard beslag	Standard mounting bracket
	3390258	Pose m. dele	Bag w. parts
	2044025	Skrue M5x6	Screw M5x6
	3040016	Sekskantnøgle 4 mm	Hexagon spanner 4 mm
	3040026	Sekskantnøgle 2,5 mm	Hexagon spanner 2,5 mm
	3397565	Skumemballage	Foam packing
	3391964	Omslag	Wrapper
	3506087	Monterings instruktion	Mounting instruction

Skrueoversigt
Survey of screws

1	2042049	Skrue M4x16	Screw M4x16
2	2044012	Skrue M5x10	Screw M5x10
3	2622028	Skive	Washer